

Receipt Printer and Cash Drawer setup



IMPORTANT: We require any receipt printer to be an Epson model. It must also be set in ESC/POS mode for it to work with the Gatekeeper.

Gymmaster setup:

1. Log in to Gymmaster and navigate to Settings > Advanced Configuration > Point of Sale. Enable the Use a Thermal Receipt Printer setting.
2. Navigate to Settings > Financial Configuration > POS Stations and select the Gatekeeper the Cash Drawer is connected to.

Receipt Printer and Cash Drawer

1. Connect the Receipt Printer to the Gatekeeper and the Cash Drawer to the Receipt Printer.



Cash Drawer with Kicker/Trigger (Without Receipt Printer)

1. Connect the Cash Drawer Kicker/Trigger to the Gatekeeper and then connect the Cash Drawer to the Cash Drawer Kicker/Trigger.
2. Contact Gymmaster support for assistance with setting the Ip device on the Gatekeeper for the Cash Drawer.

If you require any help or encounter any issues, please contact [GymMaster](#)

